

PermaroofUK<sup>®</sup>

Pipe flashing detail (pre-fabricated pipe boot)



## Pipe flashing detail (pre-fabricated pipe boot)

As with any detail, make sure the area is clean and dry. Measure the diameter of the pipe...




and cut out the same diameter within the pipe boot flange...



Stretch the boot over the pipe and offer into position onto the deck.



With the crayon, mark out the area to be primed approx. 10mm from the base of the boot.

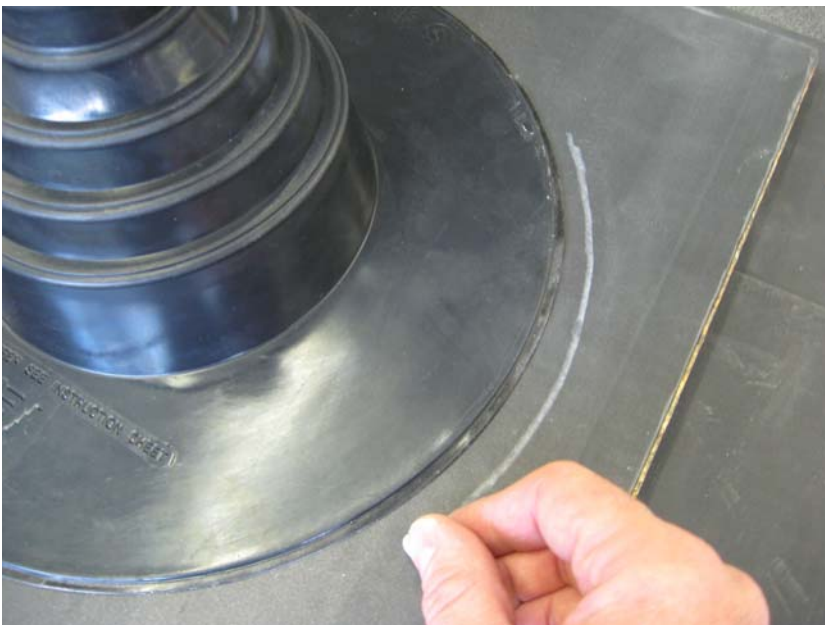

Lift the boot upwards to apply the Quickprime plus onto the deck.



Place the boot back into position on the deck and peel away the backing paper from underneath.



Use the silicon roller to secure the boot to the deck.



Pull the top of the boot around the neck of the pipe to allow Lap Sealant to be applied.



Then close up the top of the boot to cover the Lap Sealant...



Now apply the jubilee clip, and secure into place.



Trim the jubilee clip to size...



The finished detail.

